


Touch Switch Door Bell

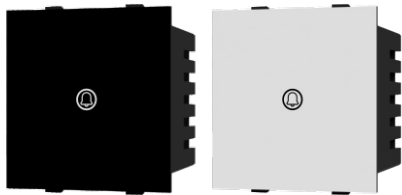

Supports maximum 100Watt Ding-Dong Door Bell

Installation Instructions

Turn off the power supply to the switchboard.
Remove the existing doorbell switch from the switchboard.
Replace the Switch with "Touch Switch Door Bell" by following the below connection diagram.
Turn the power supply back on.
Now, control the Door Bell through Touch Switch.

